 


User Manual for Refillable Compatible Ink Cartridge

 
HP Designjet 1050c/1050c Plus/1055cm/ 1055cm Plus/5000/5500

Caution: Please remove the rubber plug from the vent hole before installing cartridge onto the printer and keep it unplugged during printing.

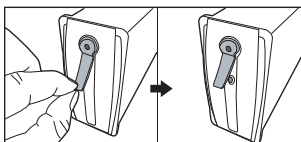

I. INSTALLATION

1. Remove the used/empty cartridge from printer according to the printer user manual.
2. Unplug the rubber plug from the Vent Hole according to the tips on the end of the cartridge .
3. Install a new cartridge onto the printer.
4. For HP #80, 'INK CART. ACCESS HP No.(80) Ink cartridges succesfully installed. Press ENTER to continue' will be displayed on the panel of printer. For HP #81 & #83, 'INK CART. ACCESS HP Ink cartridges succesfully installed. Press ENTER to continue' will be displayed on the panel of printer. Press the 'ENTER' button.
5. 'READY' is displayed on the panel of printer.

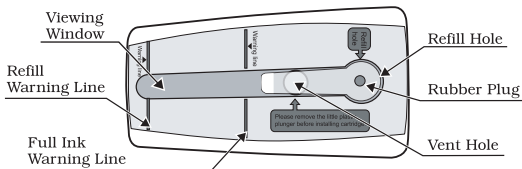

NOTE

Please read it carefully before any action!

1. Please remove the rubber plug from the vent hole before installing cartridge onto the printer and keep it unplugged during printing.
2. Please check regularly on the ink consumption of cartridge from the transparent Viewing Window. Once the ink level goes below the Refill Warning Line, please replace or refill the cartridge.
3. Any removing and installing operation for the cartridge or turning on and off printer will make the ink measurement of the chip to be reset as full. So, the ink level shown on printer panel sometimes may not indicate the real ink consumption. Thus, you are suggested to check ink level visually.
4. Please unplug the rubber plug gently when refilling the ink, or else the ink on the plug will spill out and pollute the surroundings.
5. Whenever you take out cartridge from the printer, please keep the ink outlet of the cartridge upward to avoid the remaining ink coming out from it.
6. To ensure the printout quality and to protect the print-head, it is not suggested to use other brands of compatible ink cartridges at the same time.

II. REFILLING

1. Unplug the rubber plug from the Refill Hole, then, use a refill kit (e.g. large-sized syringe, etc) to fill the ink into the cartridge (Fig. 1).
2. While refilling ink into the cartridge, please pay attention to ink level displayed on the Viewing Window of the cartridge. Please stop filling when the ink level reaches the Full Ink Warning Line.
3. Use tissues to wipe off the residual ink around Refill Hole, and reset the rubber plug.
4. You are ready for printing again!

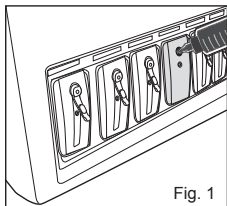 


Fig. 1